

C A M B R I D G E



MODEL AL660-LA SERIES ALUMINUM LOW PROFILE LARGE ANIMAL SCALE

ONE DIGITALSCALES.com

Your First Choice
for Industrial, Home and Specialty Scales
800-620-7811
www.onedigitalscales.com



Our AL660-LA version is designed for horse and large animal applications. This scale combines our low profile design, aluminum construction, and a durable hard rubber top pad to create a scale ideally suited for any farm or stable environment. Aluminum construction and stainless steel captive ball leveling feet work together to make this an easy to move and easy to level weighing platform, which is impervious to weather and corrosion.

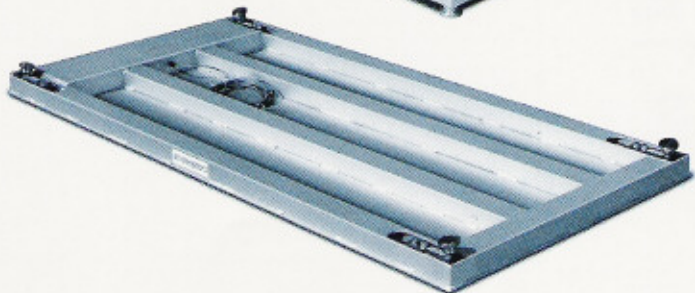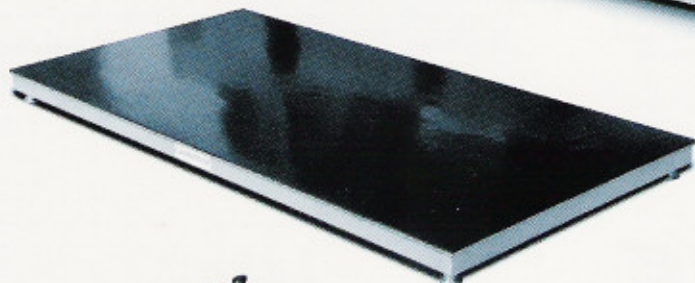


STANDARD FEATURES

- 1/4" Structural Tubular Aluminum Construction
- 1/4" Smooth Aluminum Deck Plate
- 1/4" Rubber Mat - 60 Durometer
- Side Access Plastic NEMA 4x Junction Box
- Stainless Steel Captive Ball Leveling Feet
- 150% Overload Protection
- 100% End Loading Capacity
- Low Profile Design - Only 3 1/2" High
- 20 Foot Shielded Indicator Cable
- Shock Load Protection
- Four Internally Mounted Shear Beam Load Cells, NTEP Certified-5,000 Division, Class III/IIIL, Environmentally Protected, IP 67 Water Resistant Rated

Cambridge Scale Works, Inc., P.O. Box 670 Honey Brook, PA 19344 (610) 273-7040
www.cambridgescale.com



Plastic NEMA 4x junction box is housed inside the end tube on the AL660-LA. This arrangement protects the junction box but still allows easy access for periodic adjustments. Indicator cord emerges from under the scale and can be routed to either side of the scale and kept out of the path of the animal.

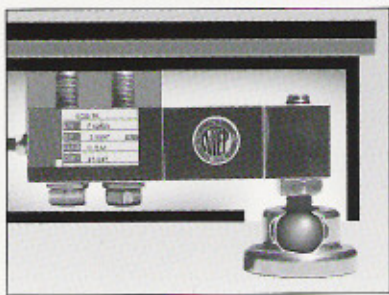

Each load cell is "pocketed" in the frame of the scale protecting both the load cell and wiring. The AL660-LA features stainless steel captive ball leveling feet for unmatched stability on even the most irregular surface. (shown as cutaway view).

MODEL AL660-LA OPTIONS



Stainless Steel IP 67 Water Resistant Rated Load Cells With Stainless Steel Hardware



Remote stainless steel NEMA 4X junction box.



On board Stainless Steel NEMA 4X junction box.

ACCESSORIES

- Easy incline ramps
- Bumper guards
- Pit forms
- Indicator/Printer stands
- Locator brackets
- 4" Leveling Foot Base Pads

MODEL AL660-LA SERIES SIZES AND CAPACITIES

SIZE	CAPACITY	SHIP WEIGHT
24" X 48" X 3.5"	1,000 Lb. X .2 Lb.	100 Lb.
	2,500 Lb. X .5 Lb.	100 Lb.
36" X 72" X 3.5"	1,000 Lb. X .2 Lb.	180 Lb.
	2,500 Lb. X .5 Lb.	180 Lb.

Specifications subject to change. Custom sizes and capacities are available.

INDICATORS

MODEL 708S



STANDARD FEATURES

- Stainless Steel, Wall Mount, NEMA 4x Enclosure
- 5 Digit LED Display
- Selectable Filtering
- Keyboard Tare
- Lb/Kg Conversion
- Bi-Directional Serial Interface
- Dual Preset Weight Comparators or Checkweigher with Outputs



MODEL 758




STANDARD FEATURES

- Runs On (6) D-Cell Batteries
- Pushbutton Tare
- Lb/Kg Conversion
- 5 Digit LCD Display
- Selectable Filtering
- RS 232 Output
- 200 Hour Operation
- AC Power Adapter



MODEL CI-2001A

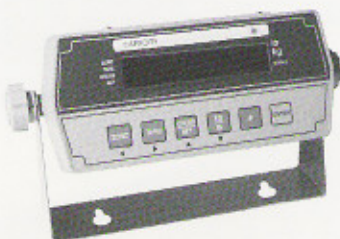


STANDARD FEATURES

- Compact and Simple
- 120 VAC Adapter
- Kg/Lb Switchable
- (6) Digit LED Display
- Gross / Net / Tare
- RS 232C Interface
- Wall / Panel Mounting



CAMBRIDGE

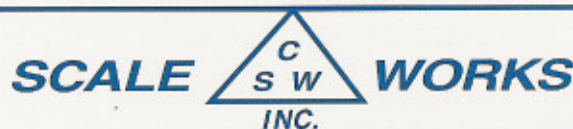

CAMBRIDGE SCALE WORKS WILL WARRANT THIS PRODUCT FOR ONE FULL YEAR AGAINST DEFECT IN MATERIAL OR WORKMANSHIP.

FOR MORE INFORMATION ON THIS SCALE AND OUR EQUIPMENT CONTACT:

Cambridge Scale Works, Inc.

DISTRIBUTED BY

ONE DIGITAL SCALES.com

Your First Choice for Industrial, Home and Specialty Scales

800-620-7811

www.onedigitalscales.com

... INC. WEB SITE AT