



BE ADAM

CFW Weighing Scales



Speed, Performance, Value - Perfect Balance

- **Smart design** The CFW features a generous stainless steel platform and a cast iron base. The top pan and base are designed to withstand dirty industrial applications. With an internal resolution over 1:400,000 the CFW will weigh and count small samples.
- **Safety features** The CFW has load cell protection to reduce the risk of overloads and damage caused by misuse.
- **Multiple weighing modes** The CFW has all the popular weighing modes used in industry: weighing, check weighing, and parts counting using preset samples. Automatic memory accumulation.
- **Choice of 4 weighing units** Features all the weighing units, in industrial settings: Kg, Lb, oz, and Lb:oz.
- **Power options** AC adapter and internal rechargeable battery are both included with the CFW for powering flexibility.
- **Plus these standard features:** Simple set-up and operation, splash-proof keypad, backlit LCD, auto-calibration through the keypad, overload indicator, low-battery indicator, and auto power-off.

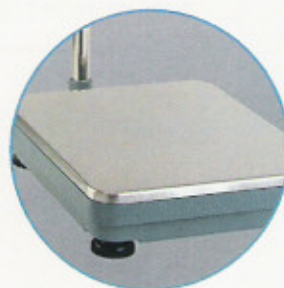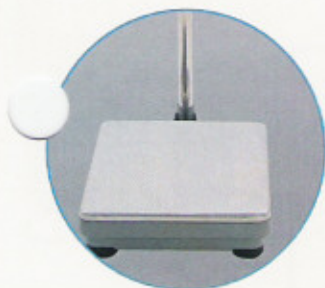

With reliable performance and durable construction, the CFW floor scale are unmatched for value in industrial weighing. From parts counting to check weighing, the versatile CFW is a multi-purpose scale that will serve numerous industrial applications.



Technical Specifications:

Model	CFC 130a	CFC 330a	CFC 660a	CFW 1320a
Capacity	130Lb / 60Kg	330Lb / 150Kg	660Lb / 300Kg	1320Lb / 600Kg
Readability	0.01Lb / 5g	0.02Lb / 10g	0.05Lb / 20g	0.1Lb / 50g
Repeatability (s.d)	0.01Lb / 5g	0.02Lb / 10g	0.05Lb / 20g	0.1Lb / 50g
Linearity (+/-)	0.02Lb / 10g	0.04Lb / 20g	0.1Lb / 40g	0.2Lb / 100g
Platform size	16.7" x 20.7" / 425 x 525mm			23.6" x 31.5" / 600 x 800mm

General Specifications:

Weighing units	Kg, Lb, oz, Lb:oz
Application	Weighing, parts counting, check weighing
Features	Auto power off setting Rechargeable battery Color coded keys for zero and tare Adjustable feet and indicator positioning Large stainless steel pan Memory accumulation / totalization Preset weight count alarm
Tare range	Full capacity by subtraction
Stabilization time	Typically 2 seconds
Interface	Optional bi-directional RS232
Operating temperature	32°F to 104°F / 0°C to 40°C
Power supply	AC adapter / Internal rechargeable battery
Calibration	Automatic external
Display	Backlit LCD displays
Housing	ABS plastic, stainless steel platform
Net weight	34Lb / 15Kg
Overall dimensions (w x d x h)	16.7" x 27.6" x 37.4" / 425 x 700 x 950mm 23.6" x 36.4" x 38.2" / 600 x 925 x 970mm (CFW 1320a)

Key Accessories:

- In-use wet cover
- RS232 interface (factory-installed option)

Adam Equipment has been providing professionals with quality balances and scales for over 30 years. The company is certified to ISO 9001:2000.

Adam Equipment manufactures and distributes a complete selection of mass measurement products for the laboratory, medical, educational, industrial and retail markets. All Adam balances and scales are backed by Adam Assurance Warranties with responsive and reliable service before, during and after the sale.

ONE DIGITAL SCALES.com

Your First Choice
for Industrial, Home and Specialty Scales

800-620-7811

www.onedigitalscales.com

