

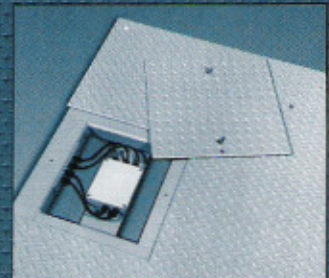


C A M B R I D G E

MODEL 660 "CLASSIC" SERIES LOW PROFILE SCALES

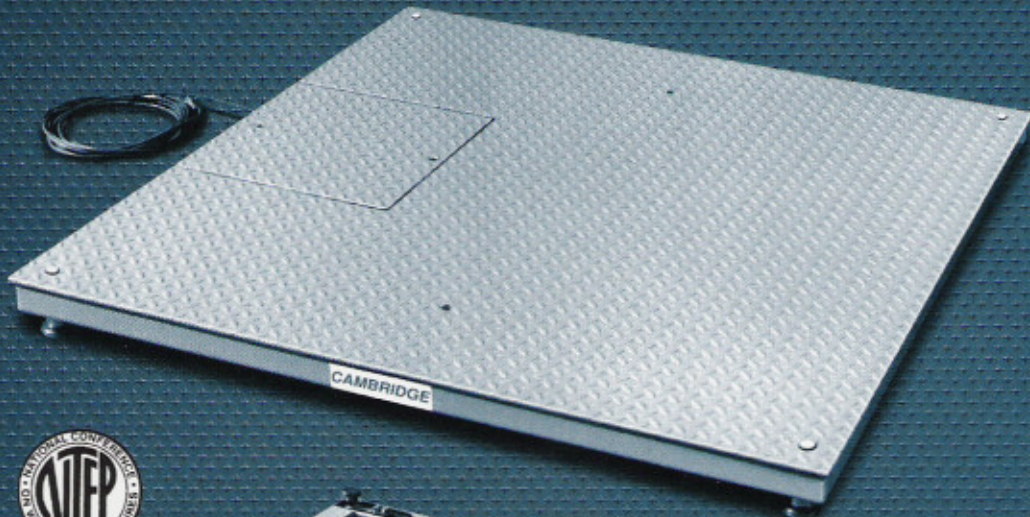

The Model 660 "Classic" Series feature top leveling access and top access to the plastic NEMA 4x junction box for convenient leveling and corner adjustments.

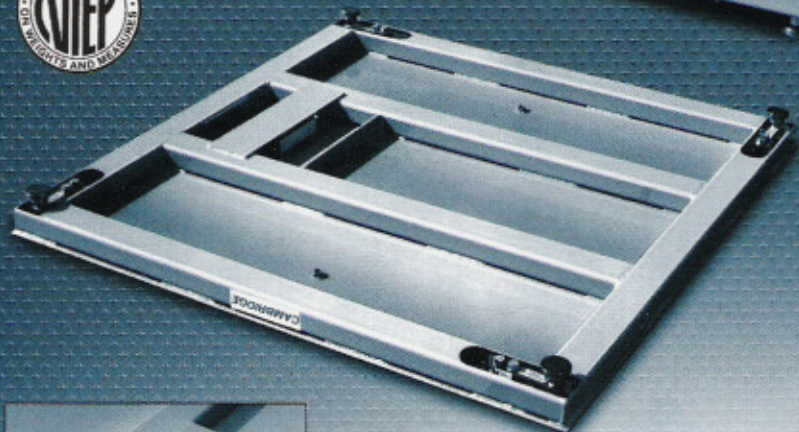


The Cambridge Scale Works, Inc. Model 660 "Classic" Series bases feature heavy structural tubular steel construction, heavy diamond tread deck plate, captive ball leveling feet and a unique load cell alignment for increased accuracy with decreased cell damage from side loading.

FEATURES

- 1 Part in 5,000 Accuracy (NTEP)
- 1 Part in 10,000 Accuracy (Non-NTEP)
- Heavy Structural Tubular Steel Construction
- Heavy Diamond Tread Deck Plate
- Top Access Plastic NEMA 4x Junction Box
- Top Access Leveling
- Captive Ball Leveling Feet
- 200% Overload Protection
- 100% End Loading Capacity
- Low Profile Design Allows Easy Incline Ramping
- Eye-Bolt Holes for Easy Set-Up and Moving
- 20 Foot Shielded Indicator Cable
- Shock Load Protection
- Four Internally Mounted Shear Beam Load Cells:
 - 1) NTEP Certified-5,000 Division
 - 2) Class III/IIIL
 - 3) Environmentally Protected
 - 4) IP 67 Water Resistant Rated



Heavy structural tubular steel construction and heavy diamond tread deck plate make the "Classic" ideal in applications where strength and durability are a must.

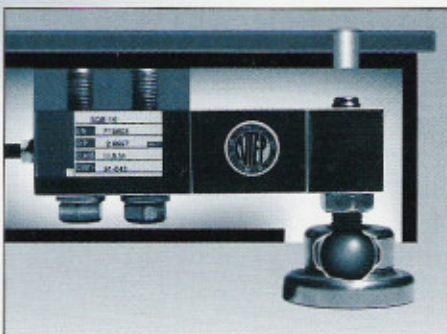

Cutaway showing load cell, top leveling access and captive ball leveling foot.



The Model 660 "Classic" Series design utilizes (4) captive ball leveling feet for durability and accuracy.

ONE DIGITAL SCALES.com

Your First Choice
for Industrial, Home and Specialty Scales
800-620-7811
www.onedigitalscales.com



remote NEMA 4x "J" box with 10' Sealtite conduit. Perfect for harsh conditions and chemical applications where total stainless steel is not required.

Fork lift package shown with optional attached indicator stand and battery operated indicator. Perfect when low profile, heavy duty capacity, and portability are a must.




FORK LIFT PACKAGE

All of the standard features of the 660 "Classic" but with built in fork lift skids for those applications requiring convenient and rapid transporting of the scale. Built in corner guards help protect the leveling foot and load cells from possible damage from fork lift.

PIT FORM

Includes everything but the concrete. Each Cambridge Scale Works pit form is custom built to exactly contain the scale you order. These forms feature welded reinforcing rods on all sides and corner plates for easy installation.

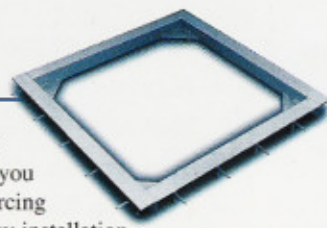


BUMPER GUARDS

Protect your investment and add years to the life of your scale with our 360° diamond steel bumpers. Angled design deflects fork lift blades and prevent unwanted movement and damage to scale.



EASY INCLINE RAMPS

These back saving ramps are ideal when a pit application is impossible. Designed to fit all four sides of any 660 "Classic" scale and lock in place with the attached brackets.

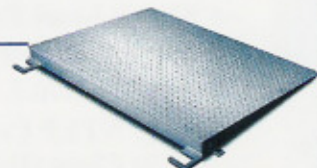

OTHER ACCESSORIES AVAILABLE - SEE MODEL 660 LOW PROFILE BROCHURE FOR MORE DETAILS.

	5,000 Lb.	10,000 Lb.	20,000 Lb.	50,000 Lb.
48" X 48" X 5"	1/4"	1/4"	5/16"	3/4"
48" X 60" X 3.5"	1/4"	1/4"	5/16"	3/4"
48" X 60" X 5"	1/4"	1/4"	5/16"	3/4"
48" X 72" X 3.5"	1/4"	1/4"	5/16"	3/4"
48" X 72" X 5"	1/4"	1/4"	5/16"	3/4"
60" X 60" X 3.5"	1/4"	1/4"	5/16"	3/4"
60" X 60" X 5"	1/4"	1/4"	5/16"	3/4"
60" X 84" X 5"	1/4"	1/4"	5/16"	3/4"
72" X 72" X 5"	1/4"	1/4"	5/16"	3/4"
72" X 96" X 5"	1/4"	1/4"	5/16"	3/4"
72" X 96" X 5.5"	1/4"	1/4"	5/16"	3/4"
72" X 120" X 5.5"	1/4"	1/4"	5/16"	3/4"
96" X 96" X 5.5"	1/4"	1/4"	5/16"	3/4"
96" X 120" X 5.5"	1/4"	1/4"	5/16"	3/4"
120" X 120" X 5.5"	1/4"	1/4"	5/16"	3/4"

Specifications subject to change without notice.

WARRANTY

CAMBRIDGE SCALE WORKS WILL WARRANT THIS PRODUCT FOR ONE FULL YEAR AGAINST DEFECTS IN MATERIAL OR WORKMANSHIP.

ONE DIGITALSCALES.com

Your First Choice
for Industrial, Home and Specialty Scales

800-620-7811

www.onedigitalscales.com