


PRODUCT SPECIFICATIONS

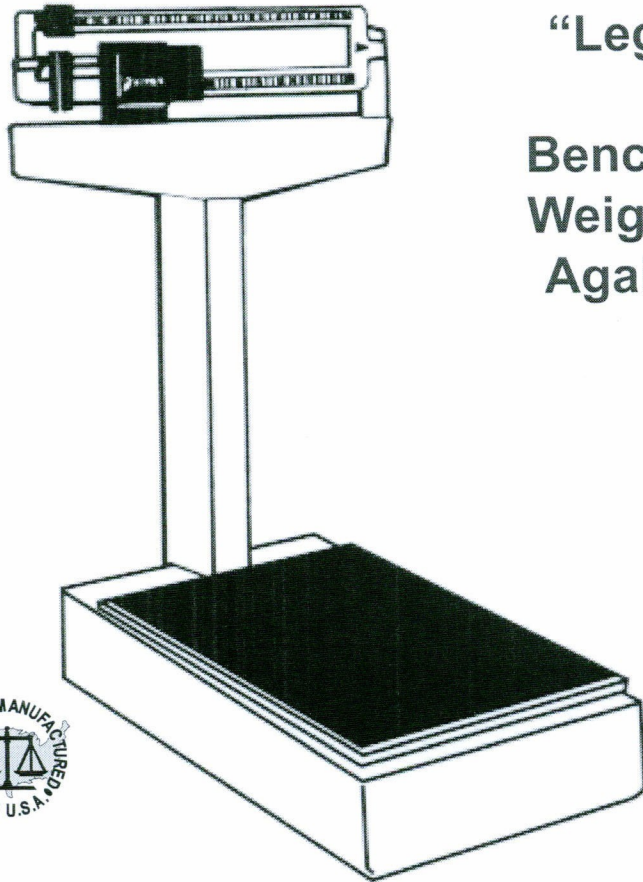

**“Legal for Trade”
Rugged
Bench Beam Scale
Weighs Accurately
Again and Again!**

Detecto's 4420 Bench Beam Scale is designed for rugged industrial environments where high accuracy and minimum maintenance are necessary. The heavy-duty welded steel base will stand up under the most rigorous use and still provide long-term accuracy to 4 ounces. Special tip locks and checks prevent platform tipping, protecting pivots and bearings. Side checks bring platform to rest quickly for fast, accurate weighing. The scale's accuracy is further enhanced by its precision die-cast weighbeam which is easily read from both sides. The 4420's tough mar-resistant finish protects the scale for years to come.

YOUR CHOICE OF POUNDS OR KILOGRAMS!

Model 4420 - 350 lb x 4 oz
(First dimension parallel to beam face)

Platform Size: 13 3/4" x 18 1/2"
Finish: Charcoal gray
Approximate Weight: 48 1/2 lb
Height: 29 5/8"

Model 4420kg - 140 kg x 100 g
(First dimension parallel to beam face)

Platform Size: 36 cm x 48 cm
Finish: Charcoal gray
Approximate Weight: 22 kg
Height: 75 cm

Kilogram version is not "Legal for Trade".



The Detecto 4420 Bench Scale meets all requirements of Handbook 44, issued by the National Institute of Standards and Technology and has been issued the Certificate of Conformance No. 91-162.

Cardinal Scale reserves the right to improve, enhance and modify features and specifications without prior notice.

ONE DIGITAL SCALES.com
Your First Choice
for Industrial, Home and Specialty Scales
800-620-7811
www.onedigitalscales.com