

# SK-WP Scales are tough, sanitary and portable



## Features of all SK-WP models:

SK-WP Scales are fast, accurate and portable; ideal for unlimited applications including portion control, check weighing, filling & mixing, whether in the store, the office, at home or in the field.

All SK-WP models are built to withstand the toughest food service, food processing, chemical and outdoor environments.

- Stainless steel construction
- Dustproof and waterproof (IP65)
- Five (5) capacities, from 2 lb to 44 lb
- Up to 2500 resolution, (5000 with SK-5001WP, grams only)
- Portable (6 D-type batteries, not included)
- Large, easy-to-read LCD display (25mm)
- Stainless steel removable weigh pan (quick, easy cleaning)
- NSF Certified; Sanitary for food processing & food service
- Solid & reliable design
- Temperature compensated (for use near ovens or in refrigerated areas)
- Proven, accurate strain gauge technology
- Unbeatable two (2) year warranty
- Legal-For-Trade, pending (certain models)
- Full scale push-button Tare/Zero
- Net weight & stability indicators
- Low battery indicator (advance notice to change batteries)
- Auto Power Off (preserves battery life)
- AC adapter (optional, non-washdown)

Your choice of Weighing Modes:



Lb mode, SK-WP models



Metric mode, SK-WP models



Lb/decimal oz mode, SK-WPZ models



Lb/fractional oz mode, SK-WPZ models

# SK-WP

**ONE** DIGITALSCALES.com

Your First Choice  
for Industrial, Home and Specialty Scales

**800-620-7811**

www.onedigitalscales.com

## SK-WP Series

Weighs in lb and metric.

### SK Models (Legal-for-Trade, pending)

Model	Capacity/Resolution	
	lb	metric
SK-1000WP	2.2 lb x 0.001 lb	1000 g x 0.5 g
SK-2000WP	4.4 lb x 0.002 lb	2000 g x 1 g
SK-5000WP	11 lb x 0.005 lb	5000 g x 2 g
SK-5001WP	Grams only	5000 g x 1 g
SK-10WP	22 lb x 0.01 lb	10 kg x 0.005 kg
SK-20WP	44 lb x 0.02 lb	20 kg x 0.01 kg

## SK-WPZ Series

Includes ounce modes; select from decimal or fractional oz.

### SK-Z Models (ounce versions)

Model	Capacity			Resolution		
	lb/oz	metric	lb	dec. oz	fract. oz	metric
SK-2000WPZ	4 lb, 6 oz	2000 g	0.002 lb	0.05 oz	1/16 oz	1 g
SK-5000WPZ	11 lb	5000 g	0.005 lb	0.1 oz	1/8 oz	2 g
SK-20WPZ	44 lb	20 kg	0.02 lb	1 oz	1 oz	0.01 kg

## Why choose an SK-WP Series Digital Scale instead of a mechanical scale?

- SK-WP models have no moving parts to wear out or go out of calibration.
- SK-WP models are fast; weight displays are unmistakable.
- SK-WP models offer fast, quick push-button tare/zero for re-zeroing any size container(s). Also fast and easy re-zeroing for recipe formulations.
- SK-WP models have multiple units of measure; select from lb, kg/g.
- SK-WPZ models also offer lb/oz (both decimal and fractional).



Removable stainless steel weighing pan with rugged pan support

Sealed internal components for maximum moisture protection

Stainless steel outer housing.

## SK-WP Series Specifications, NSF Accepted

Model	SK-1000WP	SK-2000WP	SK-5000 WP	SK-5001 WP	SK-10WP	SK-20WP
Capacity	1000g/2.2lb	2000g/4.4lb	5000g/11lb	5000g	10kg/22lb	20kg/44lb
Resolution	0.5g/0.001lb	1g/0.002lb	2g/0.005lb	1g	0.005kg/0.01lb	0.01kg/0.02lb
Linearity	± 1g	± 2g	± 4g	± 4g	± 0.01kg	± 0.02kg
Display	25mm/ 1 inch, 7 segment LCD					
Dimensions	150 (H) x 266 (W) x 280 (D) mm / 5.75 (H) x 10.5 (W) x 11 (D) inches					
Pan Size	232 (W) x 192 (D) mm / 9.1 (W) x 7.5 (D) inches					
Battery Life	600 hours with manganese type cells*, 1200 hours with alkaline type cells* (* approx.)					
Operating Temp.	-10° C ~ 40° C / 14° F ~ 104° F RH less than 85%					
Weight	Approx. 2.9 kg. / 6.4 lb					
Calibration Mass	1000g	2000g	5000g	5000g	10kg	20kg
Power	6 'D' size batteries (not included) or FV-05 AC adapter (option)					

## SK -WPZ Series Specifications

Model	SK-2000WPZ	SK-5000WPZ	SK-20WPZ
Capacity	2000g/4.4lb/4lb 6oz	11lb	44lb
Resolution	1g/0.002lb/0.05oz/1/8oz	2g/0.005lb/0.1oz/1/4oz	0.01kg/0.02lb/1oz
Linearity	± 2g	± 4g	± 0.02kg
Display	25mm/ 1 inch, 7 segment LCD		
Dimensions	150 (H) x 266 (W) x 280 (D) mm / 5.75 (H) x 10.5 (W) x 11 (D) inches		
Pan Size	232 (W) x 192 (D) mm / 9.1 (W) x 7.5 (D) inches		
Battery Life	600 hours with manganese type cells*, 1200 hours with alkaline type cells* (* approx.)		
Operating Temp.	-10° C ~ 40° C / 14° F ~ 104° F RH less than 85%		
Weight	Approx. 2.9 kg. / 6.4 lb		
Calibration Mass	2000g	5000g	20kg
Power	6 'D' size batteries (not included) or FV-05 AC adapter (option)		

Specifications are subject to change without notice.

### Options: AC Adapters

- FV-05, 110 Volt  
(Power transformer is not waterproof)
- FV-06, 220 Volt  
(Power transformer is not waterproof)

### Certification:

- NSF

### Approvals:

- NIST Class III & Canadian W&M pending, except SK-5001WP and SK-WPZ models




National Sanitation Foundation

### Dimensions mm/inches:

150 (H) x 266 (W)  
x 280 (D) mm

5.75 (H) x 10.5 (W)  
x 11 (D) inches

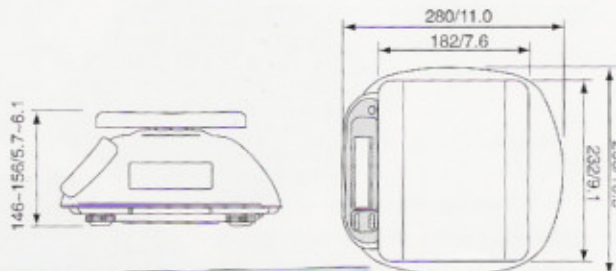

# SK-WP Series



**ONE** DIGITALSCALES.com

Your First Choice

for Industrial, Home and Specialty Scales

**800-620-7811**

www.onedigitalscales.com